


BEDIENUNGSANLEITUNG USER MANUAL

POS-12 LED TCL POWERSTICK Color Changer

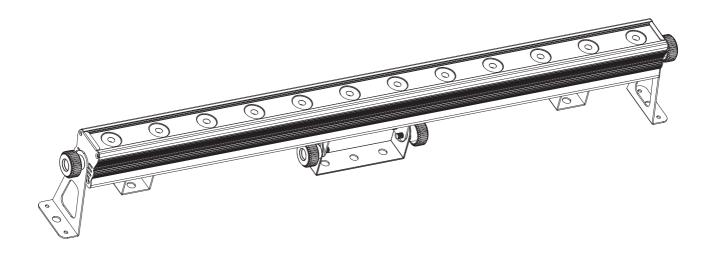

Inhaltsverzeichnis Table of contents

Deutsch

| EINFÜHRUNG | 4 |
|------------------------------|----|
| Lieferumfang | |
| SICHERHEITSHINWEISE | 5 |
| BESTIMMUNGSGEMÄßE VERWENDUNG | 6 |
| GERÄTEBESCHREIBUNG | 7 |
| Features | |
| Geräteübersicht | 8 |
| INSTALLATION | 8 |
| Montage | 8 |
| Überkopfmontage | 8 |
| DMX512-Ansteuerung | 10 |
| Anschluss ans Netz | 10 |
| Master/Slave-Betrieb | 11 |
| BEDIENUNG | 11 |
| Standalone-Modus | 11 |
| Control Board | 12 |
| DMX-Modus | 14 |
| DMX-Protokoll | 15 |
| 7-Kanal-Modus | 15 |
| 3-Kanal-Modus | 16 |
| 4-Kanal-Modus | 16 |
| 5-Kanal-Modus | 16 |
| 6-Kanal-Modus | 17 |
| 9-Kanal-Modus | 17 |
| 12-Kanal-Modus | 18 |
| 18-Kanal-Modus | 19 |
| 36 Kanal-Modus | 20 |
| REINIGUNG UND WARTUNG | 21 |
| Sicherungswechsel | 22 |
| TECHNISCHE DATEN | 22 |

English

| INTRODUCTION | 23 |
|---------------------------|----|
| Delivery includes | 23 |
| SAFETY INSTRUCTIONS | |
| OPERATING DETERMINATIONS | 25 |
| DESCRIPTION OF THE DEVICE | 26 |
| Features | 26 |
| Overview | 26 |
| INSTALLATION | 27 |
| Rigging | 27 |
| Overhead rigging | 27 |
| DMX-512 connection | 28 |
| Connection with the mains | 29 |
| Master/Slave-operation | 29 |
| OPERATION | |
| Stand-alone mode | |
| Control Board | 30 |
| DMX-Mode | 33 |
| DMX-protocol | |
| 7 channel mode | |
| 3 channel mode | 34 |
| 4 channel mode | |
| 5 channel mode | |
| 6 channel mode | |
| 9 channel mode | 36 |
| 12 channel mode | |
| 18 channel mode | |
| 36 channel mode | |
| CLEANING AND MAINTENANCE | |
| Replacing the fuse | 40 |
| TECHNICAL SPECIFICATIONS | 40 |

Diese Bedienungsanleitung gilt für die Artikelnummer 51841364 This user manual is valid for the article number 51841364

Das neueste Update dieser Bedienungsanleitung finden Sie im Internet unter: You can find the latest update of this user manual in the Internet under:

www.futurelight.com



BEDIENUNGSANLEITUNG



POS-12 LED TCL POWERSTICK Farbwechsler



ACHTUNG!

Gerät vor Feuchtigkeit und Nässe schützen! Vor Öffnen des Gerätes vom Netz trennen!

Lesen Sie vor der ersten Inbetriebnahme zur eigenen Sicherheit diese Bedienungsanleitung sorgfältig durch!

Alle Personen, die mit der Aufstellung, Inbetriebnahme, Bedienung, Wartung und Instandhaltung dieses Gerätes zu tun haben, müssen

- entsprechend qualifiziert sein
- diese Bedienungsanleitung genau beachten
- die Bedienungsanleitung als Teil des Produkts betrachten
- die Bedienungsanleitung während der Lebensdauer des Produkts behalten
- die Bedienungsanleitung an jeden nachfolgenden Besitzer oder Benutzer des Produkts weitergeben
- sich die letzte Version der Anleitung im Internet herunter laden

EINFÜHRUNG

Wir freuen uns, dass Sie sich für einen FUTURELIGHT POS-12 LED TCL POWERSTICK entschieden haben. Wenn Sie nachfolgende Hinweise beachten, sind wir sicher, dass Sie lange Zeit Freude an Ihrem Kauf haben werden.

Nehmen Sie den POS-12 LED TCL POWERSTICK aus der Verpackung.

Lieferumfang

| 1 | Gerät |
|---|---------------------|
| 1 | Bedienungsanleitung |
| 1 | Anschlussleitung |



SICHERHEITSHINWEISE

1

ACHTUNG!

Seien Sie besonders vorsichtig beim Umgang mit gefährlicher Netzspannung. Bei dieser Spannung können Sie einen lebensgefährlichen elektrischen Schlag erhalten!

Dieses Gerät hat das Werk in sicherheitstechnisch einwandfreiem Zustand verlassen. Um diesen Zustand zu erhalten und einen gefahrlosen Betrieb sicherzustellen, muss der Anwender die Sicherheitshinweise und die Warnvermerke unbedingt beachten, die in dieser Bedienungsanleitung enthalten sind.



Unbedingt lesen:

Bei Schäden, die durch Nichtbeachtung der Anleitung verursacht werden, erlischt der Garantieanspruch. Für daraus resultierende Folgeschäden übernimmt der Hersteller keine Haftung.

Das Gerät darf nicht in Betrieb genommen werden, nachdem es von einem kalten in einen warmen Raum gebracht wurde. Das dabei entstehende Kondenswasser kann unter Umständen Ihr Gerät zerstören. Lassen Sie das Gerät solange uneingeschaltet, bis es Zimmertemperatur erreicht hat!

Bitte überprüfen Sie vor der ersten Inbetriebnahme, ob kein offensichtlicher Transportschaden vorliegt. Sollten Sie Schäden an der Netzleitung oder am Gehäuse entdecken, nehmen Sie das Gerät nicht in Betrieb und setzen sich bitte mit Ihrem Fachhändler in Verbindung.

Der Aufbau entspricht der Schutzklasse I. Der Netzstecker darf nur an eine Schutzkontakt-Steckdose angeschlossen werden, deren Spannung und Frequenz mit dem Typenschild des Gerätes genau übereinstimmt. Ungeeignete Spannungen und ungeeignete Steckdosen können zur Zerstörung des Gerätes und zu tödlichen Stromschlägen führen.

Den Netzstecker immer als letztes einstecken. Der Netzstecker muss dabei gewaltfrei eingesetzt werden. Achten Sie auf einen festen Sitz des Netzsteckers.

Lassen Sie die Netzleitung nicht mit anderen Kabeln in Kontakt kommen! Seien Sie vorsichtig beim Umgang mit Netzleitungen und -anschlüssen. Fassen Sie diese Teile nie mit feuchten Händen an! Feuchte Hände können tödliche Stromschläge zur Folge haben.

Netzleitungen nicht verändern, knicken, mechanisch belasten, durch Druck belasten, ziehen, erhitzen und nicht in die Nähe von Hitze- oder Kältequellen bringen. Bei Missachtung kann es zu Beschädigungen der Netzleitung, zu Brand oder zu tödlichen Stromschlägen kommen.

Die Kabeleinführung oder die Kupplung am Gerät dürfen nicht durch Zug belastet werden. Es muss stets eine ausreichende Kabellänge zum Gerät hin vorhanden sein. Andernfalls kann das Kabel beschädigt werden, was zu tödlichen Stromschlägen führen kann.

Achten Sie darauf, dass die Netzleitung nicht gequetscht oder durch scharfe Kanten beschädigt werden kann. Überprüfen Sie das Gerät und die Netzleitung in regelmäßigen Abständen auf Beschädigungen.

Werden Verlängerungsleitungen verwendet muss sichergestellt werden, dass der Adernquerschnitt für die benötigte Stromzufuhr des Gerätes zugelassen ist. Alle Warnhinweise für die Netzleitung gelten auch für evtl. Verlängerungsleitungen.

Gerät bei Nichtbenutzung und vor jeder Reinigung vom Netz trennen! Fassen Sie dazu den Netzstecker an der Grifffläche an und ziehen Sie niemals an der Netzleitung! Ansonsten kann das Kabel und der Stecker beschädigt werden was zu tödlichen Stromschlägen führen kann. Sind Stecker oder Geräteschalter, z. B. durch Einbau nicht erreichbar, so muss netzseitig eine allpolige Abschaltung vorgenommen werden.

Wenn der Netzstecker oder das Gerät staubig ist, dann muss es außer Betrieb genommen werden, der Stromkreis muss allpolig unterbrochen werden und das Gerät mit einem trockenen Tuch gereinigt werden. Staub kann die Isolation reduzieren, was zu tödlichen Stromschlägen führen kann. Stärkere Verschmutzungen im und am Gerät dürfen nur von einem Fachmann beseitigt werden.

Es dürfen unter keinen Umständen Flüssigkeiten aller Art in Steckdosen, Steckverbindungen oder in irgendwelche Geräteöffnungen oder Geräteritzen eindringen. Besteht der Verdacht, dass - auch nur minimale - Flüssigkeit in das Gerät eingedrungen sein könnte, muss das Gerät sofort allpolig vom Netz getrennt werden. Dies gilt auch, wenn das Gerät hoher Luftfeuchtigkeit ausgesetzt war. Auch wenn das Gerät scheinbar noch funktioniert, muss es von einem Fachmann überprüft werden ob durch den Flüssigkeitseintritt eventuell Isolationen beeinträchtigt wurden. Reduzierte Isolationen können tödliche Stromschläge hervorrufen.

In das Gerät dürfen keine fremden Gegenstände gelangen. Dies gilt insbesondere für Metallteile. Sollten auch nur kleinste Metallteile wie Heft- und Büroklammern oder gröbere Metallspäne in das Gerät gelangen, so ist das Gerät sofort außer Betrieb zu nehmen und allpolig vom Netz zu trennen. Durch Metallteile hervorgerufene Fehlfunktionen und Kurzschlüsse können tödliche Verletzungen zur Folge haben.



GESUNDHEITSRISIKO!

Blicken Sie niemals direkt in die Lichtquelle, da bei empfindlichen Menschen u. U. epileptische Anfälle ausgelöst werden können (gilt besonders für Epileptiker)!

Kinder und Laien vom Gerät fern halten!

Das Gerät darf niemals unbeaufsichtigt betrieben werden!

BESTIMMUNGSGEMÄßE VERWENDUNG

Bei diesem Gerät handelt es sich um einen Effektstrahler, mit dem sich dekorative Lichteffekte erzeugen lassen. Dieses Produkt ist nur für den Anschluss an 230 V, 50 Hz Wechselspannung zugelassen und wurde ausschließlich zur Verwendung in Innenräumen konzipiert.

Dieses Gerät ist für professionelle Anwendungen, z. B. auf Bühnen, in Diskotheken, Theatern etc. vorgesehen.

Lichteffekte sind nicht für den Dauerbetrieb konzipiert. Denken Sie daran, dass konsequente Betriebspausen die Lebensdauer des Gerätes erhöhen.

Vermeiden Sie Erschütterungen und jegliche Gewaltanwendung bei der Installation oder Inbetriebnahme des Gerätes.

Achten Sie bei der Wahl des Installationsortes darauf, dass das Gerät nicht zu großer Hitze, Feuchtigkeit und Staub ausgesetzt wird. Vergewissern Sie sich, dass keine Kabel frei herumliegen. Sie gefährden Ihre eigene und die Sicherheit Dritter!

Das Gerät darf nicht in einer Umgebung eingesetzt oder gelagert werden, in der mit Spritzwasser, Regen, Feuchtigkeit oder Nebel zu rechnen ist. Feuchtigkeit oder sehr hohe Luftfeuchtigkeit kann die Isolation reduzieren und zu tödlichen Stromschlägen führen. Beim Einsatz von Nebelgeräten ist zu beachten, dass das Gerät nie direkt dem Nebelstrahl ausgesetzt ist und mindestens 0,5 m von einem Nebelgerät entfernt betrieben wird. Der Raum darf nur so stark mit Nebel gesättigt sein, dass eine gute Sichtweite von mindestens 10 m besteht.

Die Umgebungstemperatur muss zwischen -5° C und +45° C liegen. Halten Sie das Gerät von direkter Sonneneinstrahlung (auch beim Transport in geschlossenen Wägen) und Heizkörpern fern.

Die relative Luftfeuchte darf 50 % bei einer Umgebungstemperatur von 45° C nicht überschreiten.

Dieses Gerät darf nur in einer Höhenlage zwischen -20 und 2000 m über NN betrieben werden.

Verwenden Sie das Gerät nicht bei Gewitter. Überspannung könnte das Gerät zerstören. Das Gerät bei Gewitter allpolig vom Netz trennen (Netzstecker ziehen).

Das Bildzeichen Gegenständen. Der Abstand zu beleuchteten Gegenständen. Der Abstand zwischen Lichtaustritt und der zu beleuchteten Fläche darf 0,1 Meter nicht unterschreiten!

Das Gerät darf nur über den Montagebügel installiert werden. Um eine gute Luftzirkulation zu gewährleisten, muss um das Gerät ein Freiraum von mindestens 50 cm eingehalten werden.

Das Gehäuse darf niemals umliegende Gegenstände oder Flächen berühren!

Achten Sie bei der Montage, beim Abbau und bei der Durchführung von Servicearbeiten darauf, dass der Bereich unterhalb des Montageortes abgesperrt ist.

Das Gerät ist immer mit einem geeigneten Sicherungsseil zu sichern.

Die maximale Umgebungstemperatur $T_a = 45^{\circ}$ C darf niemals überschritten werden.

Nehmen Sie das Gerät erst in Betrieb, nachdem Sie sich mit seinen Funktionen vertraut gemacht haben. Lassen Sie das Gerät nicht von Personen bedienen, die sich nicht mit dem Gerät auskennen. Wenn Geräte nicht mehr korrekt funktionieren, ist das meist das Ergebnis von unsachgemäßer Bedienung!

Reinigen Sie das Gerät niemals mit Lösungsmitteln oder scharfen Reinigungsmitteln, sondern verwenden Sie ein weiches und angefeuchtetes Tuch.

Soll das Gerät transportiert werden, verwenden Sie bitte die Originalverpackung, um Transportschäden zu vermeiden. Achten Sie bitte unbedingt darauf, dass das Gerät im Lieferzustand verpackt wird.

Beachten Sie bitte, dass eigenmächtige Veränderungen an dem Gerät aus Sicherheitsgründen verboten sind.

Der Serienbarcode darf niemals vom Gerät entfernt werden, da ansonsten der Garantieanspruch erlischt.

Wird das Gerät anders verwendet als in dieser Bedienungsanleitung beschrieben, kann dies zu Schäden am Produkt führen und der Garantieanspruch erlischt. Außerdem ist jede andere Verwendung mit Gefahren, wie z. B. Kurzschluss, Brand, elektrischem Schlag, Abstürzen etc. verbunden.


GERÄTEBESCHREIBUNG

Features

LED-Farbwechslerleiste mit 3-W-TCLs

- 3, 4, 5, 6, 7, 9, 12, 18, oder 36 DMX-Kanäle wählbar für verschiedene Anwendungsmöglichkeiten
- Ausgestattet mit 12 x 3in1-Tricolor-LED in den Farben rot, grün und blau
- Jede LED kann einzeln angesteuert werden
- Stufenlose RGB-Farbmischung
- Dimmer
- Geschwindigkeit der Farbwechsel und Strobe-Effekt einstellbar
- DMX-gesteuerter Betrieb oder Standalone-Betrieb mit Master-/Slave-Funktion möglich
- Farb-Presets
- Interne Programme
- Musikgetaktet über eingebautes Mikrofon
- Mikrofonempfindlichkeit über Drehregler einstellbar
- Adressierung und Einstellung über Steuereinheit mit 4-stelliger LED-Anzeige
- Netzanschluss über Neutrik PowerCon-Buchse und beiliegendes Netzkabel
- Durchschleifausgang zur Spannungsversorgung eines weiteren Gerätes
- Nach jeweils 8 Geräten muss neu eingespeist werden
- DMX512-Steuerung über jeden handelsüblichen DMX-Controller möglich

Geräteübersicht

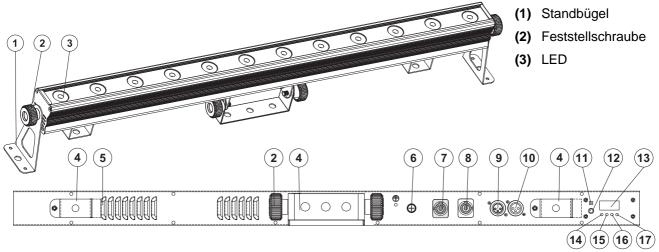

- (4) Montage-/Hängebügel
- (5) Lüftungsschlitze
- (6) Sicherungshalter
- (7) Spannungsversorgungseingang
- (8) Spannungsversorgungsausgang
- (9) DMX-Eingangsbuchse
- (10) DMX-Ausgangsbuchse

- (11) Mikrofon
- (12) Mic-Sensitivity-Regler
- (13) Display
- (14) Mode-Taste
- (15) Up-Taste
- (16) Down-Taste
- (17) Enter-Taste

INSTALLATION

Montage

Das Gerät kann direkt auf den Boden gestellt werden oder in jeder möglichen Position im Trussing installiert werden, ohne seine funktionellen Eigenschaften zu verändern.

Überkopfmontage



LEBENSGEFAHR!

Bei der Installation sind insbesondere die Bestimmungen der BGV C1 und EN 60598-2-17 zu beachten! Die Installation darf nur vom autorisierten Fachhandel ausgeführt werden!

Die Aufhängevorrichtungen des Gerätes muss so gebaut und bemessen sein, dass sie 1 Stunde lang ohne dauernde schädliche Deformierung das 10-fache der Nutzlast aushalten kann.

Die Installation muss immer mit einer zweiten, unabhängigen Aufhängung, z. B. einem geeigneten Fangnetz, erfolgen. Diese zweite Aufhängung muss so beschaffen und angebracht sein, dass im Fehlerfall der Hauptaufhängung kein Teil der Installation herabfallen kann.

Während des Auf-, Um- und Abbaus ist der unnötige Aufenthalt im Bereich von Bewegungsflächen, auf Beleuchterbrücken, unter hochgelegenen Arbeitsplätzen sowie an sonstigen Gefahrbereichen verboten.

Der Unternehmer hat dafür zu sorgen, dass sicherheitstechnische und maschinentechnische Einrichtungen vor der ersten Inbetriebnahme und nach wesentlichen Änderungen vor der Wiederinbetriebnahme durch Sachverständige geprüft werden.

Der Unternehmer hat dafür zu sorgen, dass sicherheitstechnische und maschinentechnische Einrichtungen mindestens alle vier Jahre durch einen Sachverständigen im Umfang der Abnahmeprüfung geprüft werden. Der Unternehmer hat dafür zu sorgen, dass sicherheitstechnische und maschinentechnische Einrichtungen mindestens einmal jährlich durch einen Sachkundigen geprüft werden.

Vorgehensweise:

Das Gerät sollte idealerweise außerhalb des Aufenthaltsbereiches von Personen installiert werden.

WICHTIG! ÜBERKOPFMONTAGE ERFORDERT EIN HOHES MAß AN ERFAHRUNG. Dies beinhaltet (aber beschränkt sich nicht allein auf) Berechnungen zur Definition der Tragfähigkeit, verwendetes Installationsmaterial und regelmäßige Sicherheitsinspektionen des verwendeten Materials und des Gerätes. Versuchen Sie niemals, die Installation selbst vorzunehmen, wenn Sie nicht über eine solche Qualifikation verfügen, sondern beauftragen Sie einen professionellen Installateur. Unsachgemäße Installationen können zu Verletzungen und/oder zur Beschädigung von Eigentum führen.

Das Gerät muss außerhalb des Handbereichs von Personen installiert werden.

Wenn das Gerät von der Decke oder hochliegenden Trägern etc. abgehängt werden soll, muss immer mit Traversensystemen gearbeitet werden. Das Gerät darf niemals frei schwingend im Raum befestigt werden.

Achtung: Geräte können beim Herabstürzen erhebliche Verletzungen verursachen! Wenn Sie Zweifel an der Sicherheit einer möglichen Installationsform haben, installieren Sie das Gerät NICHT!

Vergewissern Sie sich vor der Montage, dass die Montagefläche mindestens die 10-fache Punktbelastung des Eigengewichtes des Gerätes aushalten kann.



BRANDGEFAHR!

Achten Sie bei der Installation des Gerätes bitte darauf, dass sich im Abstand von mind. 0,5 m keine leicht entflammbaren Materialien (Deko, etc.) befinden.

Befestigen Sie das Gerät mit dem Hängebügel über einen geeigneten Haken an Ihrem Traversensystem. Sichern Sie das Gerät bei Überkopfmontage immer mit einem geeigneten Sicherungsseil.

Es dürfen nur Sicherungsseile und Schnellverbindungsglieder gemäß DIN 56927, Schäkel gemäß DIN EN 1677-1 und BGV C1 Kettbiner eingesetzt werden. Die Fangseile, Schnellverbindungsglieder, Schäkel und Kettbiner müssen auf Grundlage der aktuellsten Arbeitsschutzbestimmungen (z. B. BGV C1, BGI 810-3) ausreichend dimensioniert sein und korrekt angewendet werden.

Bitte beachten Sie: Bei Überkopfmontage in öffentlichen bzw. gewerblichen Bereichen ist eine Fülle von Vorschriften zu beachten, die hier nur auszugsweise wiedergegeben werden können. Der Betreiber muss sich selbständig um die Beschaffung der geltenden Sicherheitsvorschriften bemühen und diese einhalten!

Der Hersteller haftet nicht für Schäden, die durch unsachgemäße Installation und unzureichende Sicherheitsvorkehrungen verursacht werden!

Hängen Sie das Sicherungsseil in dem Fangseilloch im Hängebügel ein und führen Sie es über die Traverse bzw. einen sicheren Befestigungspunkt. Hängen Sie das Ende in dem Schnellverschlussglied ein und ziehen Sie die Sicherungsmutter gut fest.

Der maximale Fallabstand darf 20 cm nicht überschreiten.

Ein Sicherungsseil, das einmal der Belastung durch Absturz ausgesetzt war oder beschädigt ist, darf nicht mehr als Sicherungsseil eingesetzt werden.

Stellen Sie den Neigungswinkel über den Hängebügel ein und ziehen Sie die Feststellschrauben gut fest.



LEBENSGEFAHR!

Vor der ersten Inbetriebnahme muss die Einrichtung durch einen Sachverständigen geprüft werden!

DMX512-Ansteuerung



Achten Sie darauf, dass die Adern der Datenleitung an keiner Stelle miteinander in Kontakt treten. Die Geräte werden ansonsten nicht bzw. nicht korrekt funktionieren.





Beachten Sie, dass die Startadresse abhängig vom verwendeten Controller ist. Unbedingt Bedienungsanleitung des verwendeten Controllers beachten.



Die Verbindung zwischen Controller und Gerät sowie zwischen den einzelnen Geräten sollte mit einem DMX-Kabel erfolgen. Die Steckverbindung geht über 3-polige XLR-Stecker und -Kupplungen.

Belegung der XLR-Verbindung:

DMX-Ausgang

XLR-Einbaubuchse:



1: Masse 2: Signal (–) 3: Signal (+) DMX-Eingang
XLR-Einbaustecker:



Wenn Sie Controller mit dieser XLR-Belegung verwenden, können Sie den DMX-Ausgang des Controllers direkt mit dem DMX-Eingang des ersten Gerätes der DMX-Kette verbinden. Sollen DMX-Controller mit anderen XLR-Ausgängen angeschlossen werden, müssen Adapterkabel verwendet werden.

Aufbau einer seriellen DMX-Kette:

Schließen Sie den DMX-Ausgang des ersten Gerätes der Kette an den DMX-Eingang des nächsten Gerätes an. Verbinden Sie immer einen Ausgang mit dem Eingang des nächsten Gerätes bis alle Geräte angeschlossen sind.

Achtung: Am letzten Gerät muss das DMX-Kabel durch einen Abschlusswiderstand abgeschlossen werden. Dazu wird ein XLR-Stecker in den DMX-Ausgang am letzten Gerät gesteckt, bei dem zwischen Signal (–) und Signal (+) ein $120-\Omega$ -Widerstand eingelötet ist.

Anschluss ans Netz

Schließen Sie das Gerät über die beiliegende Netzanschlussleitung ans Netz an.

Die Belegung der Anschlussleitungen ist wie folgt:

| Leitung | Pin | International |
|-----------|---------------|---------------|
| Braun | Außenleiter | L |
| Blau | Neutralleiter | N |
| Gelb/Grün | Schutzleiter | |

Der Schutzleiter muss unbedingt angeschlossen werden!

Wenn das Gerät direkt an das örtliche Stromnetz angeschlossen wird, muss eine Trennvorrichtung mit mindestens 3 mm Kontaktöffnung an jedem Pol in die festverlegte elektrische Installation eingebaut werden.

Das Gerät darf nur an eine Elektroinstallation angeschlossen werden, die den VDE-Bestimmungen DIN VDE 0100 entspricht. Die Hausinstallation muss mit einem Fehlerstromschutzschalter (RCD) mit 30 mA Bemessungsdifferenzstrom ausgestattet sein.



Lichteffekte dürfen nicht über Dimmerpacks geschaltet werden.

Das Gerät ist mit einer verriegelbaren Netzanschlussbuchse ausgestattet. Schließen Sie das Netzkabel an und drehen Sie es nach rechts bis es einrastet. Stecken Sie den Netzstecker in eine geerdete Schutzkontaktsteckdose ein.

An der Rückseite der Geräte befindet sich eine Einbaubuchse (Power Out). Verbinden Sie den Ausgang mit dem Netzanschluss des nächsten Gerätes bis alle Geräte angeschlossen sind.

Bitte beachten: Es dürfen max. 8 Geräte in Reihe betrieben werden. Nach jeweils 8 Geräten muss erneut die Spannungsversorgung angeschlossen werden.

Master/Slave-Betrieb

Im Master/Slave-Betrieb lassen sich mehrere Geräte synchronisieren, die dann von einem Mastergerät gesteuert werden.

An der Rückseite des POS-12 LED TCL Powersticks befindet sich eine XLR-Einbaubuchse (DMX Out) und ein XLR-Einbaustecker (DMX In), über die sich mehrere Geräte miteinander verbinden lassen.

Wählen Sie das Gerät aus, das zur Steuerung der Effekte dienen soll. Dieses Gerät arbeitet dann als Master-Gerät und steuert alle weiteren Slave-Geräte, die über ein DMX-Kabel mit dem Master-Gerät verbunden werden. Stecken Sie das DMX-Kabel in die DMX OUT-Buchse und verbinden Sie es mit dem DMX IN-Stecker des nächsten Gerätes.

Stellen Sie beim Master-Gerät den gewünschten Master Mode und bei allen Slave-Geräten den Slave Mode ein (siehe hierzu Kapitel Control Board).

BEDIENUNG

Wenn Sie das Gerät an die Spannungsversorgung angeschlossen haben, nimmt der FUTURELIGHT POS-12 LED TCL Powerstick den Betrieb auf.

Das LED-Display leuchtet auf und Sie können die gewünschten Einstellungen mit den Tasten MODE, ENTER. UP und DOWN auswählen.

Das Gerät verfügt über ein eingebautes Mikrofon und einen Drehregler an der Geräterückseite, um die Musikempfindlichkeit einzustellen.

Das Gerät hat zwei Betriebsarten. Es kann entweder im Standalone- oder im DMX-gesteuerten Modus betrieben werden.

- STANDALONE-MODUS
- Interne Programme, Musiksteuerung/Geschwindigkeit
- Einstellung LED-Farben, 0 100 %
- Einstellung feste Farben
- Einstellung des Slave-Modus
- DMX-MODUS
- Einstellung des DMX-Kanal-Modus

Standalone-Modus

Der FUTURELIGHT POS-12 LED TCL Powerstick lässt sich im Standalone-Betrieb ohne Controller einsetzen.

Trennen Sie dazu den FUTURELIGHT POS-12 LED TCL Powerstick vom Controller.



Control Board

Das Control Board bietet mehrere Möglichkeiten: so lassen sich z. B. die DMX-Startadresse eingeben oder die internen Programme abspielen.

Durch Drücken der MODE-Taste können Sie sich im Hauptmenü bewegen. Zur Auswahl des gewünschten Menüpunktes drücken Sie die ENTER-Taste.

Durch Drücken der UP/DOWN-Taste können Sie die Auswahl verändern.

Bestätigen Sie jede Änderung mit der ENTER-Taste. Der jeweilige Modus kann durch die MODE-Taste verlassen werden.

Die jeweiligen Funktionen werden im Folgenden beschrieben.

Einstellung der internen Programme, Musiksteuerung / Geschwindigkeit

Wenn das Display ein **P** anzeigt, können Sie das gewünschte interne Programm auswählen. Die Einstellungen können Sie folgender Tabelle entnehmen:

| Modus: | Wert: | Funktion: |
|--------|--------|---|
| | P1 | Endlosschleife in 7 Farben, Wechsel in 3-Sekundentakt |
| | P2 | Endlosschleife in 7 Farben, Überblendung in 3-Sekundentakt |
| | P3 | Endlosschleife in 3 Farben, Wechsel in 3-Sekundentakt |
| Р | P4 | Endlosschleife in 3 Farben, Überblendung in 3-Sekundentakt |
| | P5 "Ch | "Chase"-Programm |
| | P6 | Chaser in 7 Farben, musikgesteuert |
| | P7 | Endlosschleife in 7 Farben, Chaser, Strobe, musikgesteuert |

Drücken Sie die MODE-Taste bis das LED-Display **S**___ anzeigt. Drücken Sie die ENTER-Taste und wählen Sie mit der UP- oder DOWN-Taste die gewünschte Geschwindigkeit (S001 – S100, zunehmende Geschwindigkeit) aus. Drücken Sie die ENTER-Taste zur Bestätigung.

Einstellung der LED-Farben (0 – 100%)

Wenn das Display ein **U** anzeigt, können Sie die Dimmerintensität der einzelnen LED-Farben von 0-100 % (0-255) einstellen. Die Einstellungen können Sie folgender Tabelle entnehmen:

| Modus | Wert: | Funktion: |
|-------|-----------|---------------|
| | r 0 - 100 | Rot (0-100%) |
| U | g 0 - 100 | Grün (0-100%) |
| | b 0 - 100 | Blau (0-100%) |

Einstellung der festen Farben

Wenn das Display ein **C** anzeigt, können Sie die gewünschte feste Farbe auswählen. Die Einstellungen können Sie folgender Tabelle entnehmen:

| Modus: | Wert: | Funktion: |
|--------|-------|-----------|
| | C-01 | Rot |
| | C-02 | Grün |
| | C-03 | Blau |
| С | C-04 | Cyan |
| | C-05 | Magenta |
| | C-06 | Gelb |
| | C-07 | Weiß |



Einstellung des Slave-Modus

Einstellung für das Master-Gerät

Stellen Sie wie zuvor beschrieben den gewünschten Standalone-Modus ein.

Drücken Sie die MODE-Taste bis das LED-Display SLA anzeigt.

Drücken Sie die ENTER-Taste und stellen Sie mit der UP- oder DOWN-Taste A 1 ein. Drücken Sie die ENTER-Taste zur Bestätigung.

Einstellung für die Slave-Geräte

Drücken Sie die MODE-Taste bis das LED-Display SLA anzeigt.

Drücken Sie die ENTER-Taste und stellen Sie mit der UP- oder DOWN-Taste A 1 ein. Drücken Sie die ENTER-Taste zur Bestätigung.

Chaser Modus (nur für die internen Programme P 5 und P 6 verfügbar)

Dieser Modus ermöglicht mehrere Slave-Einheiten nacheinander, in Reihe abzuspielen und dadurch Chaser-Effekte über mehrere Geräte zu erhalten. Sie können bis zu 126 verschiedene Slave-Gruppen bilden.

Zur Verdeutlichung finden Sie nachfolgend ein Beispiel mit 10 unterschiedlichen Slave-Gruppen.

Einstellung für das Master-Gerät

Stellen Sie beim Master-Gerät das gewünschte interne Programm P 5 oder P 6 ein.

Drücken Sie die MODE-Taste bis das LED-Display SLA anzeigt.

Drücken Sie die ENTER-Taste und stellen Sie mit der UP- oder DOWN-Taste A10 (Anzahl der Slave-Gruppen) ein. Drücken Sie die ENTER-Taste zur Bestätigung.

Einstellung für die Slave-Geräte

Drücken Sie die MODE-Taste bis das LED-Display SLA anzeigt.

Drücken Sie die ENTER-Taste und stellen Sie mit der UP- oder DOWN-Taste die gewünschte Slave-Gruppe (hier A1 – A10) ein. Drücken Sie die ENTER-Taste zur Bestätigung.

| | Master-Gerät | Slave-Gerät – gleicher Step wie Master | Slave-Gerät – gleicher Step wie Master | ••• | Slave-Gerät –Step 1 Chaser | Slave-Gerät –Step 1 Chaser | Slave-Gerät –Step 1 Chaser | ••• | Slave-Gerät –Step 2 Chaser | Slave-Gerät –Step 2 Chaser | Slave-Gerät –Step 2 Chaser | | : | Slave-Gerät –Step 9 Chaser |
|-----------------|--------------|--|--|-----|----------------------------|----------------------------|----------------------------|-----|----------------------------|----------------------------|----------------------------|-----|-----|----------------------------|----------------------------|----------------------------|----------------------------|
| SLA Adresse: | A10 | A1 | A1 | A1 | A2 | A2 | A2 | A2 | А3 | A3 | A3 | А3 | | A10 | A10 | A10 | A10 |
| | Sla | ve-G | ruppe | 1 | 1 Slave-Gruppe 2 | | | | Sla | ave-G | rupp | e 3 | ••• | SI | ave-G | ruppe | 10 |

Einstellung des DMX-Kanal-Modus

Wenn das Display __CH anzeigt, können Sie den gewünschten DMX-Kanal-Modus auswählen. Die verfügbaren Einstellungen können Sie folgender Tabelle entnehmen:

| Modus: |
|--------|
| 3 CH |
| 4 CH |
| 5 CH |
| 6 CH |
| 7 CH |
| 9 CH |
| 12 CH |
| 18 CH |
| 36 CH |



Einstellung der DMX-Startadresse

Drücken Sie nach der Auswahl des DMX-Kanal-Modus die MODE-Taste. Durch Drücken der UP/DOWN-Taste können Sie die gewünschte DMX-Startadresse einstellen.



DMX-Modus

Das Gerät verfügt über neun verschiedene DMX-Kanal-Modi. Über das Control Board können Sie, wie zuvor beschrieben, den DMX-Kanal-Modus definieren.

Adressierung des Geräts

Um die Startadresse einzustellen drücken Sie die MODE-Taste bis das Display d (1-512) anzeigt. Sie können nun die gewünschte Adresse über die UP- oder DOWN-Tasten auswählen. Drücken Sie die ENTER-Taste zur Bestätigung. Die Startadresse ist der erste Kanal, auf den das Gerät auf Signale vom Controller reagiert.

Bitte vergewissern Sie sich, dass sich die Steuerkanäle nicht mit anderen Geräten überlappen, damit der FUTURELIGHT POS-12 LED TCL Powerstick korrekt und unabhängig von anderen Geräten in der DMX-Verbindung funktioniert. Werden mehrere POS-12 LED TCL Powerstick auf eine Adresse definiert, arbeiten sie synchron.

Ansteuerung:

Nachdem Sie die Startadresse definiert haben, können Sie den POS-12 LED TCL Powerstick über Ihren Controller ansteuern.

Bitte beachten Sie:

Schalten Sie das Gerät ein. Das Gerät prüft, ob DMX-512 Daten empfangen werden oder nicht. Wenn Daten empfangen werden, erscheint "d.001" mit der definierten Startadresse auf dem Display. Werden keine Daten empfangen, erscheint "d001" mit der definierten Startadresse.

Die Meldung erscheint

- -wenn kein 3-poliges XLR-Kabel (DMX Signalkabel vom Controller) in die DMX-Eingangsbuchse des Gerätes gesteckt wurde.
- -wenn der Controller ausgeschaltet oder defekt ist.
- -das Kabel oder der Stecker defekt ist oder das Signalkabel nicht richtig eingesteckt ist.

Achtung: Am letzten Gerät muss die DMX-Leitung durch einen 120 Ω Widerstand abgeschlossen werden damit die Geräte korrekt funktionieren.

Die einzelnen DMX-Kanäle und ihre Eigenschaften sind im Folgenden aufgeführt.

DMX-Protokoll

7-Kanal-Modus

Steuerkanal 1 - Rot

| Decima | He | xad. | Percentage | | S/F | Eigenschaft |
|--------|----|------|------------|------|-----|---------------------------|
| 0 255 | 00 |) FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün

| Decimal | Hexad. | Percentage S/F | | Eigenschaft | |
|---------|--------|----------------|---|-----------------------------|--|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) | |

Steuerkanal 3 - Blau

| I | Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---|---------|--------|-------|-------|-----|-----------------------------|
| Ī | 0 255 | 00 FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Farb-Presets

| I | Deci | imal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---|------|------|--------|-------|-------|-----|----------------|
| Ī | 0 | 15 | 00 0F | 0% | 6% | S | Keine Funktion |
| | 16 | 255 | 10 FF | 6% | 100% | F | Farb-Presets |

Steuerkanal 5 - Geschwindigkeit

Dieser Kanal ist nur aktiv wenn Kanal 6 auf Wert 32 - 223 gestellt wurde.

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---|
| 0 255 | 00 FF | 0% 100% | F | Geschwindigkeit mit zunehmender Geschwindigkeit |

Steuerkanal 5 - Strobe

Dieser Kanal ist nur aktiv wenn Kanal 6 auf Wert 0 - 31 gestellt wurde.

| Dec | imal | Hexa | d. | Perce | ntage | S/F | Eigenschaft |
|-----|------|------|----|-------|-------|-----|---|
| 0 | 15 | 00 0 | F | 0% | 6% | S | Keine Funktion |
| 16 | 255 | 10 F | F | 6% | 100% | F | Strobe-Effekt mit zunehmender Geschwindigkeit |

Steuerkanal 6 - Ein-/Ausblenden, interne Programme

| Dec | imal | Hex | ad. | Percentage | | S/F | Eigenschaft |
|-----|------|-----|-----|------------|------|-----|---|
| 0 | 31 | 00 | 1F | 0% | 12% | S | Neutral |
| 32 | 63 | 20 | 3F | 13% | 25% | S | Einblenden (0%-100%) 7 Farben (abhängig von den Kanälen 1-3) |
| 64 | 95 | 40 | 5F | 25% | 37% | S | Ausblenden (100%-0%) 7 Farben (abhängig von den Kanälen 1-3) |
| 96 | 114 | 60 | 72 | 38% | 45% | S | Aus- Einblenden (100%-0%-100%) 7 Farben (abh. v. Kanälen 1-3) |
| 115 | 127 | 73 | 7F | 45% | 50% | S | Internes Programm "Chase" |
| 128 | 159 | 80 | 9F | 50% | 62% | S | Internes Programm "Fading 7 Farben" |
| 160 | 191 | A0 | BF | 63% | 75% | S | Internes Programm "Switching 3 Farben" |
| 192 | 223 | C0 | DF | 75% | 87% | S | Internes Programm "Switching 7 Farben" |
| 224 | 255 | E0 | FF | 88% | 100% | S | Musiksteuerung |

Steuerkanal 7 – Dimmer

Dieser Kanal ist nur aktiv wenn Kanal 6 auf Wert 0 - 31 gestellt wurde.

| Decim | | | Percentage | | S/F | Eigenschaft |
|-------|---|-------|------------|------|-----|--|
| 0 25 | 5 | 00 FF | 0% | 100% | F | Allmähliche Einstellung der Dimmerintensität von 0 bis 100 % |

3-Kanal-Modus

Steuerkanal 1 - Rot

| Decima | Hexad. | Percentage | S/F | Eigenschaft |
|--------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

4-Kanal-Modus

Steuerkanal 1 - Rot

| De | cimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|----|-------|--------|-------|-------|-----|---------------------------|
| | 0 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün

| Decimal | Hexad. | Percen | ntage | S/F | Eigenschaft |
|---------|--------|--------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 1 | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Dimmer

| Deci | Decimal Hexad. | | Percentage | | S/F | Eigenschaft | |
|------|----------------|----|------------|----|------|-------------|--|
| 0 2 | 255 | 00 | FF | 0% | 100% | F | Allmähliche Einstellung der Dimmerintensität von 0 bis 100 % |

5-Kanal-Modus

Steuerkanal 1 - Rot

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau

| Deci | mal | Hexad | Perce | entage | S/F | Eigenschaft |
|------|-----|-------|-------|--------|-----|-----------------------------|
| 0 2 | 255 | 00 FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |


Steuerkanal 4 - Dimmer

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|--|
| 0 255 | 00 FF | 0% | 100% | F | Allmähliche Einstellung der Dimmerintensität von 0 bis 100 % |

Steuerkanal 5 - Strobe

| Dec | imal | Hex | ad. | Perce | ntage | S/F | Eigenschaft |
|-----|------|-----|-----|-------|-------|-----|---|
| 0 | 0 | 00 | 00 | 0% | 0% | S | Keine Funktion |
| 1 | 5 | 01 | 05 | 0% | 2% | S | Musikgesteuert (7 Farben) |
| 6 | 10 | 06 | 0A | 2% | 4% | S | Keine Funktion |
| 11 | 255 | 0B | FF | 4% | 100% | F | Strobe-Effekt mit zunehmender Geschwindigkeit |

6-Kanal-Modus

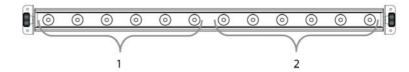

Steuerkanal 1 - Rot, LED-Segment 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün, LED-Segment 1

| Dec | imal | Hexa | ad. | Percentage | | S/F | Eigenschaft |
|-----|------|------|-----|------------|------|-----|-----------------------------|
| 0 | 255 | 00 F | ÷ | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau, LED-Segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Rot, LED-Segment 2

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|---------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |


Steuerkanal 5 - Grün, LED-Segment 2

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 6 - Blau, LED-Segment 2

| Ŀ | Decim | al | Hexa | ad. | Perce | ntage | S/F | Eigenschaft |
|---|-------|----|------|-----|-------|-------|-----|-----------------------------|
| | 0 25 | 55 | 00 F | FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

9-Kanal-Modus

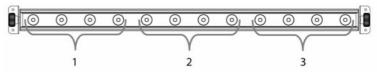

Steuerkanal 1 - Rot, LED-Segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|---------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün, LED-Segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau, LED-Segment 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Rot, LED-Segment 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 5 - Grün, LED-Segment 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 6 - Blau, LED-Segment 2

| Decimal | Hexad. | Percent | tage | S/F | Eigenschaft |
|---------|--------|---------|------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 10 | 00% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 7 - Rot, LED-Segment 3

| Decimal | Hexad. | Percei | ntage | S/F | Eigenschaft |
|---------|--------|--------|-------|-----|---------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |


Steuerkanal 8 - Grün, LED-Segment 3

| Dec | imal | Hex | ad. | Perce | ntage | S/F | Eigenschaft |
|-----|------|-----|-----|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 | FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 9 - Blau, LED-Segment 3

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

12-Kanal-Modus

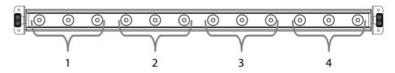

Steuerkanal 1 - Rot, LED-Segment 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün, LED-Segment 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau, LED-Segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Rot, LED-Segment 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 5 - Grün, LED-Segment 2

| | Decima | ıl He | xad. | Perce | ntage | S/F | Eigenschaft |
|---|--------|-------|------|-------|-------|-----|-----------------------------|
| ĺ | 0 25 | 5 00 |) FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 6 - Blau, LED-Segment 2

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 7 - Rot, LED-Segment 3

| Decim | al Hexa | d. Perce | entage | S/F | Eigenschaft |
|-------|---------|----------|--------|-----|---------------------------|
| 0 25 | 5 00 F | F 0% | 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 8 - Grün, LED-Segment 3

| Decima | l He | cad. | Perce | ntage | S/F | Eigenschaft |
|--------|------|------|-------|-------|-----|-----------------------------|
| 0 255 | 00 | FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 9 - Blau, LED-Segment 3

| Decin | nal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|-------|-----|--------|-------|-------|-----|-----------------------------|
| 0 2 | 55 | 00 FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 10 - Rot, LED-Segment 4

| D | ecimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---|--------|--------|-------|-------|-----|---------------------------|
| | 0 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |


Steuerkanal 11 - Grün, LED-Segment 4

| Decimal | Hexad. | Percentag | je S/F | Eigenschaft |
|---------|--------|-----------|--------|-----------------------------|
| 0 255 | 00 FF | 0% 100 | % F | Grün (0=aus, 255=100% grün) |

Steuerkanal 12 - Blau, LED-Segment 4

| Decimal | Hexad. | Percent | tage | S/F | Eigenschaft |
|---------|--------|---------|------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 10 | 00% | F | Blau (0=aus, 255=100% blau) |

18-Kanal-Modus

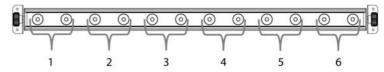

Steuerkanal 1 - Rot, LED-Segment 1

| Decimal | | Percer | | Eigenschaft |
|---------|-------|--------|------|---------------------------|
| 0 255 | 00 FF | | 100% | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün, LED-Segment 1

| Deci | mal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|------|-----|--------|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau, LED-Segment 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Rot, LED-Segment 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 5 - Grün, LED-Segment 2

| Decima | Hexad. | Percentage | S/F | Eigenschaft |
|--------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 6 - Blau, LED-Segment 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 7 - Rot, LED-Segment 3

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 8 - Grün, LED-Segment 3

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 9 - Blau, LED-Segment 3

| Otouo: N | 411a1 0 E | Jiaa, LLD Co | , 9o. | 0 |
|----------|-----------|--------------|------------------|-----------------------------|
| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 10 - Rot, LED-Segment 4

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 11 - Grün, LED-Segment 4

| Decima | Hexa | d. Perce | entage | S/F | Eigenschaft |
|--------|-------|----------|--------|-----|-----------------------------|
| 0 255 | 00 FI | F 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 12 - Blau, LED-Segment 4

| Deci | mal | Hex | ad. | Perce | ntage | S/F | Eigenschaft |
|------|-----|-----|-----|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 | FF | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 13 - Rot, LED-Segment 5

| Dec | imal | Hexad | Perce | Percentage | | Eigenschaft |
|-----|------|-------|-------|------------|---|---------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 14 - Grün, LED-Segment 5

| Dec | imal | Hexad. | Perce | Percentage | | ercentage S/F | | Eigenschaft |
|-----|------|--------|-------|------------|---|-----------------------------|--|-------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) | | |

Steuerkanal 15 - Blau, LED-Segment 5

| Deci | mal | Hexa | d. | Perce | ntage | S/F | Eigenschaft |
|------|-----|-------|----|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 FI | F | 0% | 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 16 - Rot, LED-Segment 6

| Decimal | Hexad. | Percentage | | S/F | Eigenschaft |
|---------|--------|------------|------|-----|---------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Rot (0=aus, 255=100% rot) |


Steuerkanal 17 - Grün, LED-Segment 6

| Decimal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 18 - Blau, LED-Segment 6

| Decimal | Hexad. | Percen | ntage | S/F | Eigenschaft |
|---------|--------|--------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 1 | 100% | F | Blau (0=aus, 255=100% blau) |

36 Kanal-Modus

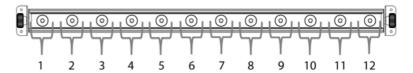

Steuerkanal 1 - Rot LED 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 2 - Grün LED 1

| De | eci | mal | Hexad. | Perce | ntage | S/F | Eigenschaft |
|----|-----|-----|--------|-------|-------|-----|-----------------------------|
| | 0 2 | 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 3 - Blau LED 1

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

Steuerkanal 4 - Rot LED 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) |

Steuerkanal 5 - Grün LED 2

| Deci | mal | Hex | ad. | Perce | ntage | S/F | Eigenschaft |
|------|-----|-----|-----|-------|-------|-----|-----------------------------|
| 0 2 | 255 | 00 | FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 6 - Blau LED 2

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

•

Steuerkanal 34 - Rot I FD 12

| Steuerkanal 54 - Rot LED 12 | | | | | | | | | | |
|-----------------------------|--------|------------|-----|---------------------------|--|--|--|--|--|--|
| Decimal | Hexad. | Percentage | S/F | Eigenschaft | | | | | | |
| 0 255 | 00 FF | 0% 100% | F | Rot (0=aus, 255=100% rot) | | | | | | |

Steuerkanal 35 - Grün LED 12

| Dec | imal | Hexad | Perce | entage | S/F | Eigenschaft |
|-----|------|-------|-------|--------|-----|-----------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Grün (0=aus, 255=100% grün) |

Steuerkanal 36 - Blau LED 12

| Decimal | Hexad. | Percentage | S/F | Eigenschaft |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blau (0=aus, 255=100% blau) |

REINIGUNG UND WARTUNG

Der Unternehmer hat dafür zu sorgen, dass sicherheitstechnische und maschinentechnische Einrichtungen mindestens alle vier Jahre durch einen Sachverständigen im Umfang der Abnahmeprüfung geprüft werden.

Der Unternehmer hat dafür zu sorgen, dass sicherheitstechnische und maschinentechnische Einrichtungen mindestens einmal jährlich durch einen Sachkundigen geprüft werden.

Dabei muss unter anderem auf folgende Punkte besonders geachtet werden:

- 1) Alle Schrauben, mit denen das Gerät oder Geräteteile montiert sind, müssen fest sitzen und dürfen nicht korrodiert sein.
- 2) An Gehäuse, Befestigungen und Montageort (Decke, Abhängung, Traverse) dürfen keine Verformungen sichtbar sein.
- 3) Die elektrischen Anschlussleitungen dürfen keinerlei Beschädigungen, Materialalterung (z.B. poröse Leitungen) oder Ablagerungen aufweisen. Weitere, auf den jeweiligen Einsatzort und die Nutzung abgestimmte Vorschriften werden vom sachkundigen Installateur beachtet und Sicherheitsmängel behoben.



LEBENSGEFAHR!

Vor Wartungsarbeiten unbedingt allpolig vom Netz trennen!

Das Gerät sollte regelmäßig von Verunreinigungen wie Staub usw. gereinigt werden. Verwenden Sie zur Reinigung ein fusselfreies, angefeuchtetes Tuch. Auf keinen Fall Alkohol oder irgendwelche Lösungsmittel zur Reinigung verwenden!

Im Geräteinneren befinden sich außer der Sicherung keine zu wartenden Teile. Wartungs- und Service- arbeiten sind ausschließlich dem autorisierten Fachhandel vorbehalten!



Sicherungswechsel

Wenn die Feinsicherung des Gerätes defekt ist, darf diese nur durch eine Sicherung gleichen Typs ersetzt werden.

Vor dem Sicherungswechsel ist das Gerät allpolig von der Netzspannung zu trennen (Netzstecker ziehen).

Vorgehensweise:

- **Schritt 1:** Drehen Sie den Sicherungshalter an der Geräterückseite mit einem passenden Schraubendreher aus dem Gehäuse (gegen den Uhrzeigersinn).
- Schritt 2: Entfernen Sie die defekte Sicherung aus dem Sicherungshalter.
- Schritt 3: Setzen Sie die neue Sicherung in den Sicherungshalter ein.
- Schritt 4: Setzen Sie den Sicherungshalter wieder im Gehäuse ein und drehen Sie ihn fest.

Sollten einmal Ersatzteile benötigt werden, verwenden Sie bitte nur Originalersatzteile.

Wenn die Anschlussleitung dieses Gerätes beschädigt wird, muss sie durch eine besondere Anschlussleitung ersetzt werden, die von Ihrem Fachhändler erhältlich ist.

Sollten Sie noch weitere Fragen haben, steht Ihnen Ihr Fachhändler jederzeit gerne zur Verfügung.

TECHNISCHE DATEN

| Spannungsversorgung: | 230 V AC, 50 Hz ~ |
|---|----------------------|
| Gesamtanschlusswert: | 60 W/105 VA |
| DMX-Steuerkanäle: | 3/4/5/6/7/9/12/18/36 |
| DMX512-Anschluss: | 3-pol. XLR |
| Blitzrate: | 30 Hz |
| Anzahl der LEDs: | 12 |
| LED-Typ: | 3-W-TCL |
| Maße (LxBxH): | 990 x 135 x 80 mm |
| Gewicht: | 3,75 kg |
| Maximale Umgebungstemperatur T _a : | 45° C |
| Maximale Leuchtentemperatur im Beharrungszustand T _c : | 65° C |
| Mindestabstand zu entflammbaren Oberflächen: | 0,5 m |
| Mindestabstand zum angestrahlten Objekt: | 0,1 m |
| Sicherung: | F 2 A, 250 V |

Bitte beachten Sie: Technische Änderungen ohne vorherige Ankündigung und Irrtum vorbehalten. 04.03.2013 ©



USER MANUAL



POS-12 LED TCL POWERSTICK Color Changer



CAUTION!

Keep this device away from rain and moisture! Unplug mains lead before opening the housing!

For your own safety, please read this user manual carefully before you initially start-up.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- download the latest version of the user manual from the Internet

INTRODUCTION

Thank you for having chosen a FUTURELIGHT POS-12 LED TCL POWERSTICK. If you follow the instructions given in this manual, we are sure that you will enjoy this device for a long period of time.

Unpack your POS-12 LED TCL POWERSTICK.

Delivery includes

| 1 | Device |
|---|--------------------|
| 1 | User manual |
| 1 | Power supply cable |

SAFETY INSTRUCTIONS



CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires!

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.





Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Please make sure that there are no obvious transport damages. Should you notice any damages on the A/C connection cable or on the casing, do not take the device into operation and immediately consult your local dealer.

This device falls under protection-class I. The power plug must only be plugged into a protection class I outlet. The voltage and frequency must exactly be the same as stated on the device. Wrong voltages or power outlets can lead to the destruction of the device and to mortal electrical shock.

Always plug in the power plug last. The power plug must always be inserted without force. Make sure that the plug is tightly connected with the outlet.

Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution! Never touch them with wet hands, as this could lead to mortal electrical shock.

Never modify, bend, strain mechanically, put pressure on, pull or heat up the power cord. Never operate next to sources of heat or cold. Disregard can lead to power cord damages, fire or mortal electrical shock.

The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to mortal damage. Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.

If extension cords are used, make sure that the core diameter is sufficient for the required power consumption of the device. All warnings concerning the power cords are also valid for possible extension cords.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord. Otherwise, the cable or plug can be damaged leading to mortal electrical shock. If the power plug or the power switch is not accessible, the device must be disconnected via the mains.

If the power plug or the device is dusty, the device must be taken out of operation, disconnected and then be cleaned with a dry cloth. Dust can reduce the insulation which may lead to mortal electrical shock. More severe dirt in and at the device should only be removed by a specialist.

There must never enter any liquid into power outlets, extension cords or any holes in the housing of the device. If you suppose that also a minimal amount of liquid may have entered the device, it must immediately be disconnected. This is also valid, if the device was exposed to high humidity. Also if the device is still running, the device must be checked by a specialist if the liquid has reduced any insulation. Reduced insulation can cause mortal electrical shock.

There must never be any objects entering into the device. This is especially valid for metal parts. If any metal parts like staples or coarse metal chips enter into the device, the device must be taken out of operation and disconnected immediately. Malfunction or short-circuits caused by metal parts may cause mortal injuries.



HEALTH HAZARD!

Never look directly into the light source, as sensitive persons may suffer an epileptic shock (especially meant for epileptics)!

Keep away children and amateurs! Never leave this device running unattended.



OPERATING DETERMINATIONS

This device is a lighting effect for creating decorative effects. This product is only allowed to be operated with an alternating voltage of 230 V, 50 Hz and was designed for indoor use only.

This device is designed for professional use, e.g. on stages, in discotheques, theatres etc.

Lighting effects are not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.

Do not shake the device. Avoid brute force when installing or operating the device.

When choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!

This device must never be operated or stockpiled in sourroundings where splash water, rain, moisture or fog may harm the device. Moisture or very high humidity can reduce the insulation and lead to mortal electrical shocks. When using smoke machines, make sure that the device is never exposed to the direct smoke jet and is installed in a distance of 0.5 meters between smoke machine and device. The room must only be saturated with an amount of smoke that the visibility will always be more than 10 meters.

The ambient temperature must always be between -5° C and +45° C. Keep away from direct insulation (particularly in cars) and heaters.

The relative humidity must not exceed 50 % with an ambient temperature of 45° C.

This device must only be operated in an altitude between -20 and 2000 m over NN.

Never use the device during thunderstorms. Over voltage could destroy the device. Always disconnect the device during thunderstorms.

This device is only allowed for an installation via the mounting bracket. In order to safeguard sufficient ventilation, leave 50 cm of free space around the device.

The housing must never touch surrounding surfaces or objects.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Always fix the fixture with an appropriate safety bond.

The maximum ambient temperature $T_a = 45^{\circ}$ C must never be exceeded.

Operate the device only after having become familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!

Never use solvents or aggressive detergents in order to clean the device! Rather use a soft and damp cloth.

Please use the original packaging if the device is to be transported. Make sure that you pack the device in the original state.

Please consider that unauthorized modifications on the device are forbidden due to safety reasons!

Never remove the serial barcode from the device as this would make the guarantee void.

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, crash etc.


DESCRIPTION OF THE DEVICE

Features

LED color changing bar with 3 W TCLs

- 3, 4, 5, 6, 7, 9, 12, 18, or 36 DMX channels selectable for numerous applications
- Equipped with 12 x 3in1 tricolor LED in the colors red, green and blue
- Each LED can be controlled individually
- Stepless RGB color changing
- Dimmer
- Programmable color change speed and strobe effect
- DMX-controlled operation or stand-alone operation with Master/Slave function
- Color Presets
- Internal programs
- Sound-controlled via built-in microphone
- Microphone-sensitivity adjustable via rotary-control
- Addressing via control panel with 4-digit LED display
- Power connection via Neutrik PowerCon jack and included power cable
- Feed-through output allows to power another device
- After every 8 devices the fixtures must have a renewed connection with the power mains
- DMX control via every standard DMX controller

Overview

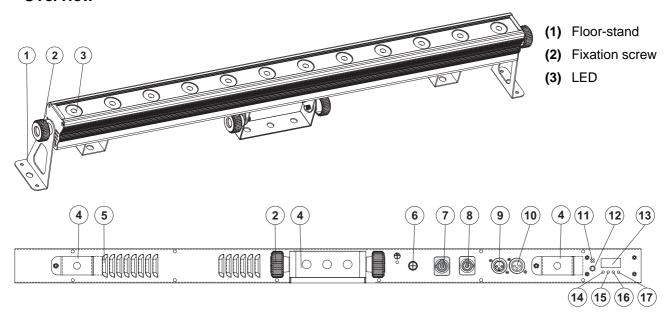

- (4) Mounting bracket
- (5) Venting slot
- (6) Fuseholder
- (7) Power input
- (8) Power output
- (9) DMX-In socket
- (10) DMX-Out socket

- (11) Microphone
- (12) Mic sensitivity control
- (13) Display
- (14) Mode button
- (15) Up button
- (16) Down button
- (17) Enter button

INSTALLATION

Rigging

The device can be placed directly on the stage floor or rigged in any orientation on a truss without altering its operation characteristics.

Overhead rigging



DANGER TO LIFE!

Please consider the EN 60598-2-17 and the respective national standards during the installation! The installation must only be carried out by an authorized dealer!

The installation of the device has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

The installation must always be secured with a secondary safety attachment, e.g. an appropriate catch net. This secondary safety attachment must be constructed in a way that no part of the installation can fall down if the main attachment fails.

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert after every four year in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

Procedure:

The device should be installed outside areas where persons may walk by or be seated.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE, including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and.or damage to property.

The device has to be installed out of the reach of people.

If the device shall be lowered from the ceiling or high joists, professional trussing systems have to be used. The device must never be fixed swinging freely in the room.

Caution: Devices may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do NOT install the device!

Before rigging make sure that the installation area can hold a minimum point load of 10 times the device's weight.



DANGER OF FIRE!

When installing the device, make sure there is no highly-inflammable material (decoration articles, etc.) within a distance of min. 0.5 m.

Mount the device with the mounting-bracket to your trussing system using an appropriate clamp.



For overhead use, always install an appropriate safety bond.

You must only use safety bonds and quick links complying with DIN 56927, shackles complying with DIN EN 1677-1 and BGV C1 carbines. The safety bonds, quick links, shackles and the carbines must be sufficiently dimensioned and used correctly in accordance with the latest industrial safety regulations (e. g. BGV C1, BGI 810-3).

Please note: for overhead rigging in public or industrial areas, a series of safety instructions have to be followed that this manual can only give in part. The operator must therefore inform himself on the current safety instructions and consider them.

The manufacturer cannot be made liable for damages caused by incorrect installations or insufficient safety precautions!

Pull the safety bond through the hole in the mounting-bracket and over the trussing system or a safe fixation spot. Insert the end in the quick link and tighten the safety screw.

The maximum drop distance must never exceed 20 cm.

A safety bond which already held the strain of a crash or which is defective must not be used again. Adjust the desired inclination-angle via the mounting-bracket and tighten the fixation screws.



DANGER TO LIFE!

Before taking into operation for the first time, the installation has to be approved by an expert!

DMX-512 connection



The wires must not come into contact with each other, otherwise the fixtures will not work at all, or will not work properly.





Please note, the starting address depends upon which controller is being used.



Only use a stereo shielded cable and 3-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.

Occupation of the XLR-connection:

DMX-output

XLR mounting-socket:



- 1: Ground
- 2: Signal (–)
- 3: Signal (+)

DMX-input

XLR mounting-plug:



- 1: Ground
- 2: Signal (-)
- 3: Signal (+)

If you are using controllers with this occupation, you can connect the DMX-output of the controller directly with the DMX-input of the first fixture in the DMX-chain. If you wish to connect DMX-controllers with other XLR-outputs, you need to use adapter-cables.

Building a serial DMX-chain:



Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 Ω resistor between Signal (–) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

Connection with the mains

Connect the device to the mains with the enclosed power supply cable.

The occupation of the connection-cables is as follows:

| Cable | Pin | International |
|--------------|---------|---------------|
| Brown | Live | L |
| Blue | Neutral | N |
| Yellow/Green | Earth | |

The earth has to be connected!

If the device will be directly connected with the local power supply network, a disconnection switch with a minimum opening of 3 mm at every pole has to be included in the permanent electrical installation.

The device must only be connected with an electric installation carried out in compliance with the IEC-standards. The electric installation must be equipped with a Residual Current Device (RCD) with a maximum fault current of 30 mA.

Lighting effects must not be connected to dimming-packs.

The device is equipped with a lockable power input connector. Plug in the power cord and turn it to the right until it locks. Plug the power cord into a grounded electrical outlet that matches the rated voltage of the machine.

On the rear panel, there is a socket (Power Out). Connect the output with the mains input of the next fixture until all fixtures are connected.

Please note: A maximum of 8 devices may be linked together. After every 8 devices, the fixtures must have a renewed connection with the power mains.

Master/Slave-operation

The master/slave-operation enables that several devices can be synchronized and controlled by one master-device.

On the rear panel of the POS-12 LED TCL Powerstick you can find an XLR-jack (DMX Out) and an XLR-plug (DMX In), which can be used for connecting several devices.

Choose the device which is to control the effects. This device then works as master device and controls all other slave devices, which are to be connected to the master device via a DMX cable. Connect the DMX OUT jack with the DMX IN plug of the next device.

Set the desired master-mode for the master-device and the slave-mode for all slave-devices. Please refer to the instructions under Control Board.



OPERATION

After you connected the spot to the mains, the FUTURELIGHT POS-12 LED TCL Powerstick starts running.

The LED display lights up and you can choose the desired mode via the buttons MODE, ENTER, UP and DOWN.

The device features a built-in microphone and a rotary-control on the rear panel to adjust the sound sensitivity.

The device has two operating modes. It can be operated in stand-alone or in DMX-controlled mode.

- STAND-ALONE MODE
- Internal programs, sound control/speed
- Setting LED colors, 0 100%
- Setting solid colors
- Setting slave mode
- DMX MODE
- Setting DMX channel mode

Stand-alone mode

In the stand-alone mode, the FUTURELIGHT POS-12 LED TCL Powerstick can be used without controller.

Disconnect the FUTURELIGHT POS-12 LED TCL Powerstick from the controller.

Control Board

The Control Board offers several features: you can simply set the starting address or run the internal programs.

Browse through the main menu by pressing MODE.

Press ENTER in order to select the desired menu.

You can change the selection by pressing UP or DOWN.

Confirm every selection by pressing the ENTER button.

You can leave every mode by pressing the MODE button.

The functions provided are described in the following sections.



Setting internal programs, sound control / speed

When the display shows **P**, you can select the desired internal program. Please see the following table.

| Mode: | Value: | Function: |
|-------|--------|--|
| | P1 | Endless loop in 7 colors, change every 3 seconds |
| | P2 | Endless loop in 7 colors, fade every 3 seconds |
| | P3 | Endless loop in 3 colors, change every 3 seconds |
| P | P4 | Endless loop in 3 colors, fade every 3 seconds |
| | P5 | "Chase" program |
| | P6 | Chaser in 7 colors via sound control |
| | P7 | Endless loop in 7 colors, chaser, strobe via sound control |

Press the MODE button until the display shows $S_{\underline{}}$. Press the ENTER button and select the desired speed (S001 – S100, increasing speed) via the UP or DOWN buttons. Press ENTER to confirm.

Setting LED colors (0 – 100%)

When the display shows \mathbf{U} , you can select the dimmer itensity of the LED colors from 0 to 100 % (0-255). Please see the following table.

| Mode: | Value: | Function: |
|-------|-----------|----------------|
| | r 0 – 100 | Red (0-100%) |
| U | g 0 – 100 | Green (0-100%) |
| | b 0 – 100 | Blue (0-100%) |

Setting solid colors

When the display shows **C**, you can select the desired solid color. Please see the following table.

| Mode: | Value: | Function: | | | |
|-------|--------|-----------|--|--|--|
| | C- 1 | Red | | | |
| | C- 2 | Green | | | |
| | C- 3 | Blue | | | |
| С | C- 4 | Cyan | | | |
| | C- 5 | Magenta | | | |
| | C- 6 | Yellow | | | |
| | C- 7 | White | | | |

Setting the slave mode

Setting for the master device

Adjust the desired stand-alone mode like described above.

Press the MODE button until the display shows **SLA**.

Press the ENTER button and adjust the A 1 via the UP or DOWN buttons. Press ENTER to confirm.

Settings for the slave devices

Press the MODE button until the display shows **SLA**.

Press the ENTER button and adjust the A 1 via the UP or DOWN buttons. Press ENTER to confirm.



Chaser Mode (only available for the internal programs P 5 and P 6)

This mode enables several slave units after the other so that chaser effects can be operated over several devices.

You can build up to 126 different slave groups. as an explanation, we give an example with 10 different slave groups.

Settings for the master device

Adjust the desired internal program P 5 or P 6 at the master device.

Press the MODE button until the display shows **SLA**.

Press the ENTER button and adjust the **A 10** (number of slave groups) via the UP or DOWN buttons. Press ENTER to confirm.

Setting for the slave devices

Press the MODE button until the display shows SLA.

Press the ENTER button and adjust the **desired slave group** (here A 1 - A 10) via the UP or DOWN buttons. Press ENTER to confirm.

| | Master unit | Slave unit – same step as master | Slave unit – same step as master | ÷ | Slave unit – step 1 Chaser | Slave unit – step 1 Chaser | Slave unit – step 1 Chaser | : | Slave unit – step 2 Chaser | Slave unit – step 2 Chaser | Slave unit – step 2 Chaser | : | : | Slave unit – step 9 Chaser | Slave unit – step 9 Chaser | Slave unit – step 9 Chaser | : |
|--------------|---------------|----------------------------------|----------------------------------|----|----------------------------|----------------------------|----------------------------|----|----------------------------|----------------------------|----------------------------|----|---|----------------------------|----------------------------|----------------------------|-----|
| SLA address: | A10 | A1 | A1 | A1 | A2 | A2 | A2 | A2 | А3 | А3 | А3 | А3 | | A10 | A10 | A10 | A10 |
| | Slave group 1 | | | | Slave group 2 | | | S | lave | group | 3 | | 5 | Slave g | roup 1 | 0 | |

Setting DMX channel mode

When the display shows __CH, you can select the desired DMX channel mode. Please see the following table.

| Mode: |
|-------|
| 3 CH |
| 4 CH |
| 5 CH |
| 6 CH |
| 7 CH |
| 9 CH |
| 12 CH |
| 18 CH |
| 36 CH |

Setting the DMX starting address

Press the MODE button after selecting the DMX channel mode. You can adjust the desired DMX starting address by pressing UP or DOWN.

| Value: |
|-----------|
| d 1 - 512 |

DMX-Mode

The device has nine different DMX channel modes. The Control Board allows you, as described above, to assign the DMX channel mode.

Addressing

Press the MODE-button until the display shows **d (1-512).** You can now set the desired address via the UP or DOWN buttons. Press ENTER to confirm. The Control Board allows you to assign the DMX fixture address, which is defined as the first channel from which the FUTURELIGHT POS-12 LED TCL Powerstick will respond to the controller.

Please, be sure that you don't have any overlapping channels in order to control each FUTURELIGHT POS-12 LED TCL Powerstick correctly and independently from any other fixture on the DMX-chain.

If several POS-12 LED TCL Powerstick are addressed similarly, they will work synchronically.

Controlling:

After having addressed the POS-12 LED TCL Powerstick, you may now start operating it via your lighting controller.

Note:

After switching on, the device will automatically detect whether DMX 512 data is received or not. If the data is received, the display will show "d.001" with the actually set address. If there is no data received at the DMX-input, the display will show "d001" with the actually set address.

This situation can occur if:

- the 3 PIN XLR plug (cable with DMX signal from controller) is not connected with the input of the device.
- the controller is switched off or defective, if the cable or connector is defective or the signal wires are swap in the input connector.

Note:

It's necessary to insert the XLR termination plug (with 120 Ohm) in the last device in the link in order to ensure proper transmission on the DMX data link.

DMX-protocol

7 channel mode

Control-channel 1 - Red

| Decim | al | Hexad. | Perce | Percentage | | Feature |
|-------|----|--------|-------|------------|---|---------------------------|
| 0 25 | 55 | 00 FF | 0% | 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green

| Deci | imal | Hexad. | Perce | ntage | S/F | Feature |
|------|------|--------|-------|-------|-----|-------------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue

| Dec | imal | Hexad | . Perc | Percentage | | Feature |
|-----|------|-------|--------|------------|---|-----------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Color Presets

| De | cimal | Hexa | ad. | Percentage | | S/F | Feature |
|----|-------|------|-----|------------|------|-----|---------------|
| (| 15 | 00 0 |)F | 0% | 6% | S | No function |
| 16 | 255 | 10 F | F | 6% | 100% | F | Color Presets |

Control-channel 5 - Speed

This channel is only active if channel 6 is set to 32 - 223.

| Decimal | Hexad. | Percer | ntage | S/F | Feature |
|---------|--------|--------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Speed with increasing speed |

Control-channel 5 - Strobe

This channel is only active if channel 6 is set to 0 - 31.

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-------------------------------------|
| 0 15 | 00 0F | 0% 6% | S | No function |
| 16 255 | 10 FF | 6% 100% | F | Strobe-effect with increasing speed |

Control-channel 6 - Fading in/out, internal programs

| Dec | imal | He | ad. | Perce | ntage | S/F | Feature |
|-----|------|----|-----|-------|-------|-----|---|
| 0 | 31 | 00 | 1F | 0% | 12% | S | Neutral |
| 32 | 63 | 20 | 3F | 13% | 25% | S | Fade in (0%-100%) 7 colors (depending of the channels 1-3) |
| 64 | 95 | 40 | 5F | 25% | 37% | S | Fade out (100%-0%) 7 colors (depending of the channels 1-3) |
| 96 | 114 | 60 | 72 | 38% | 45% | S | Fade out + fade in (100%-0%-100%) 7 colors (depending of channel 1-3) |
| 115 | 127 | 73 | 7F | 45% | 50% | S | Internal program "Chase" |
| 128 | 159 | 80 | 9F | 50% | 62% | S | Internal program "Fading 7 colors" |
| 160 | 191 | A0 | BF | 63% | 75% | S | Internal program "Switching 3 colors" |
| 192 | 223 | C0 | DF | 75% | 87% | S | Internal program "Switching 7 colors" |
| 224 | 255 | E0 | FF | 88% | 100% | S | Music control |

Control-channel 7 - Dimmer

This channel is only active if channel 6 is set to 0 - 31.

| Decimal | Hexad. | Perce | Percentage | | Feature |
|---------|--------|-------|------------|---|--|
| 0 255 | 00 FF | 0% | 100% | F | Gradual adjustment of the dimmer intensity from 0 to 100 % |

3 channel mode

Control-channel 1 - Red

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green

| Dec | imal | Hexad. | Perce | ntage | S/F | Feature |
|-----|------|--------|-------|-------|-----|-------------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue

| Deci | mal | Hexad. | Perce | ntage | S/F | Feature |
|------|-----|--------|-------|-------|-----|-----------------------------|
| 0 2 | 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

4 channel mode

Control-channel 1 - Red

| • | | | | | | | | | | | |
|---|-----|--------|-------|-------|-----|---------------------------|--|--|--|--|--|
| Decim | nal | Hexad. | Perce | ntage | S/F | Feature | | | | | |
| 0 2 | 55 | 00 FF | 0% | 100% | F | Red (0=off, 255=100% red) | | | | | |

Control-channel 2 - Green

| Dec | imal | Hexa | ad. | Perce | ntage | S/F | Feature |
|-----|------|------|-----|-------|-------|-----|-------------------------------|
| 0 | 255 | 00 F | FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Dimmer

| Decimal | Hexad. | Perce | entage | S/F | Feature |
|---------|--------|-------|--------|-----|--|
| 0 255 | 00 FF | 0% | 100% | F | Gradual adjustment of the dimmer intensity from 0 to 100 % |

5 channel mode

Control-channel 1 - Red

| Dec | imal | Hexa | d. | Perce | ntage | S/F | Feature |
|-----|------|------|----|-------|-------|-----|---------------------------|
| 0 | 255 | 00 F | F | 0% | 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green

| | Decimal | Hexad. | Percer | ntage | S/F | Feature |
|---|---------|--------|--------|-------|-----|-------------------------------|
| Ī | 0 255 | 00 FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue

| Decimal | Hex | ad. | Perce | ntage | S/F | Feature |
|---------|-----|-----|-------|-------|-----|-----------------------------|
| 0 255 | 00 | FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |


Control-channel 4 - Dimmer

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|---------|--------|-------|-------|-----|--|
| 0 255 | 00 FF | 0% | 100% | F | Gradual adjustment of the dimmer intensity from 0 to 100 % |

Control-channel 5 - Strobe

| Dec | imal | Hexad. | | Percentage | | S/F | Feature |
|-----|------|--------|----|------------|------|-----|-------------------------------------|
| 0 | 0 | 00 | 00 | 0% | 0% | S | No function |
| 1 | 5 | 01 | 05 | 0% | 2% | S | Sound Control (7 colors) |
| 6 | 10 | 06 | 0A | 2% | 4% | S | No function |
| 11 | 255 | 0B | FF | 4% | 100% | F | Strobe-effect with increasing speed |

6 channel mode

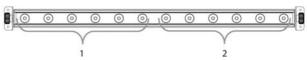

Control-channel 1 - Red. LED segment 1

| | | Percentage | | Feature |
|-------|-------|------------|---|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green, LED segment 1

| | | • | | | | | 9 |
|-----|-------|---|-----|-------|-------|-----|-------------------------------|
| Dec | cimal | Hexa | ad. | Perce | ntage | S/F | Feature |
| C | 255 | 00 F | F | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue, LED segment 1

| Decim | al H | exad. | Perce | ntage | S/F | Feature |
|-------|------|-------|-------|-------|-----|-----------------------------|
| 0 25 | 5 (| 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Red, LED segment 2

| Decim | l H | exad. | Perce | ntage | S/F | Feature |
|-------|-----|-------|-------|-------|-----|---------------------------|
| 0 25 | 5 0 | 0 FF | 0% | 100% | F | Red (0=off, 255=100% red) |

Control-channel 5 - Green, LED segment 2


| Deci | imal | Hexa | ad. | Percentage | | S/F | Feature |
|------|------|------|-----|------------|------|-----|-------------------------------|
| 0 | 255 | 00 F | F | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 6 - Blue, LED segment 2

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-----------------------------|
| 0 255 | 00 FF | 0% 100% | F | Blue (0=off, 255=100% blue) |

9 channel mode

Control-channel 1 - Red, LED segment 1

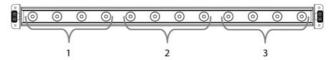

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green, LED segment 1

| Decim | nal | Hexad. | Perce | ntage | S/F | Feature |
|-------|-----|--------|-------|-------|-----|-------------------------------|
| 0 2 | 55 | 00 FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue, LED segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Red, LED segment 2

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 5 - Green, LED segment 2

| Dec | imal | Hex | ad. | Perce | ntage | S/F | Feature |
|-----|------|-----|-----|-------|-------|-----|-------------------------------|
| 0 | 255 | 00 | FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 6 - Blue, LED segment 2

| Deci | mal | Hexad. | Perce | ntage | S/F | Feature |
|------|-----|--------|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 7 - Red, LED segment 3

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |


Control-channel 8 - Green, LED segment 3

| Decima | Hexad. | Perce | Percentage | | Feature |
|--------|--------|-------|------------|---|-------------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 9 - Blue, LED segment 3

| 00116101 | Control of Charmor & Black 225 cogmont o | | | | | | | | | |
|----------|--|------------|-----|-----------------------------|--|--|--|--|--|--|
| Decimal | Hexad. | Percentage | S/F | Feature | | | | | | |
| 0 255 | 00 FF | 0% 100% | F | Blue (0=off, 255=100% blue) | | | | | | |

12 channel mode

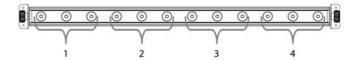

Control-channel 1 - Red, LED segment 1

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green, LED segment 1

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-------------------------------|
| 0 255 | 00 FF | 0% 100% | F | Green (0=off, 255=100% green) |

English

Control-channel 3 - Blue, LED segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Red, LED segment 2

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 5 - Green, LED segment 2

| Decimal | Hexad. | Percentage | S/F | Feature |
|----------------|--------|------------|-----|-------------------------------|
| 0 255 | 00 FF | 0% 100% | F | Green (0=off, 255=100% green) |

Control-channel 6 - Blue, LED segment 2

| Decimal | Hexad. | Percentage | | S/F | Feature |
|---------|--------|------------|------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 7 - Red, LED segment 3

| Dec | imal | Hexad. | Perce | ntage | S/F | Feature |
|-----|------|--------|-------|-------|-----|---------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Red (0=off, 255=100% red) |

Control-channel 8 - Green, LED segment 3

| Decimal | Hexad. | Percentage | | S/F | Feature |
|---------|--------|------------|-----|-----|-------------------------------|
| 0 255 | 00 FF | 0% 10 | 00% | F | Green (0=off, 255=100% green) |

Control-channel 9 - Blue, LED segment 3

| Dec | imal | Hexad | Perce | ntage | S/F | Feature |
|-----|------|-------|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 10 - Red, LED segment 4

| Dec | imal | Hexad. | Perce | ntage | S/F | Feature |
|-----|------|--------|-------|-------|-----|---------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Red (0=off, 255=100% red) |


Control-channel 11 - Green, LED segment 4

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-------------------------------|
| 0 255 | 00 FF | 0% 100% | F | Green (0=off, 255=100% green) |

Control-channel 12 - Blue, LED segment 4

| Decimal | Hexad | Perce | entage | S/F | Feature |
|---------|-------|-------|--------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

18 channel mode

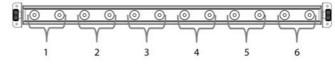

Control-channel 1 - Red, LED segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|---------|--------|-------|-------|-----|---------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green, LED segment 1

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-------------------------------|
| 0 255 | 00 FF | 0% 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue, LED segment 1

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|---------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Red, LED segment 2


| English |
|---|
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Red (0=off, 255=100% red) |
| Control-channel 5 - Green, LED segment 2 |
| Decimal Hexad. Percentage S/F Feature 0 255 00 FF 0% 100% F Green (0=off, 255=100% green) F Green (0=off, 255=100% green) |
| 0 255 00 FF 0% 100% F Green (0=011, 255=100% green) |
| Control-channel 6 - Blue, LED segment 2 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Blue (0=off, 255=100% blue) |
| Control-channel 7 - Red, LED segment 3 |
| Decimal Hexad. Percentage S/F Feature 0 255 00 FF 0% 100% F Red (0=off, 255=100% red) F Red (0=off, 255=100% red) |
| 0/255 00/FF 0 % 100 % F Neu (0=011, 255=100 % 1eu) |
| Control-channel 8 - Green, LED segment 3 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Green (0=off, 255=100% green) |
| Control-channel 9 - Blue, LED segment 3 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Blue (0=off, 255=100% blue) |
| Control-channel 10 - Red, LED segment 4 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Red (0=off, 255=100% red) |
| Control-channel 11 - Green, LED segment 4 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Green (0=off, 255=100% green) |
| Control-channel 12 - Blue, LED segment 4 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Blue (0=off, 255=100% blue) |
| Control-channel 13 - Red, LED segment 5 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Red (0=off, 255=100% red) |
| Control-channel 14 - Green, LED segment 5 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Green (0=off, 255=100% green) |
| Control-channel 15 - Blue, LED segment 5 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Blue (0=off, 255=100% blue) |
| Control-channel 16 - Red, LED segment 6 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Red (0=off, 255=100% red) |
| Control-channel 17 - Green, LED segment 6 |
| Decimal Hexad. Percentage S/F Feature |
| 0 255 00 FF 0% 100% F Green (0=off, 255=100% green) |

| Control- | Control-channel 18 - Blue, LED segment 6 | | | | | | | | | |
|----------|--|------------|-----|-----------------------------|--|--|--|--|--|--|
| Decimal | Hexad. | Percentage | S/F | Feature | | | | | | |
| 0 255 | 00 FF | 0% 100% | F | Blue (0=off, 255=100% blue) | | | | | | |

English

36 channel mode

Control-channel 1 - Red LED 1

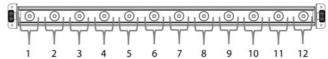

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 2 - Green LED 1

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-------------------------------|
| 0 255 | 00 FF | 0% 100% | F | Green (0=off, 255=100% green) |

Control-channel 3 - Blue LED 1

| Deci | mal | Hexa | id. | Perce | ntage | S/F | Feature |
|------|-----|------|-----|-------|-------|-----|-----------------------------|
| 0 2 | 255 | 00 F | Ä | 0% | 100% | F | Blue (0=off, 255=100% blue) |

Control-channel 4 - Red LED 2

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|---------|--------|-------|-------|-----|---------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Red (0=off, 255=100% red) |

Control-channel 5 - Green LED 2

| Dec | imal | Hexad. | Perce | ntage | S/F | Feature |
|-----|------|--------|-------|-------|-----|-------------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Green (0=off, 255=100% green) |

Control-channel 6 - Blue LED 2

| Decimal | Hexad. | Perce | ntage | S/F | Feature |
|----------------|--------|-------|-------|-----|-----------------------------|
| 0 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

.

Control-channel 34 - Red LED 12

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|---------------------------|
| 0 255 | 00 FF | 0% 100% | F | Red (0=off, 255=100% red) |

Control-channel 35 - Green LED 12

| Decimal | Hexad. | Percentage | S/F | Feature |
|---------|--------|------------|-----|-------------------------------|
| 0 255 | 00 FF | 0% 100% | F | Green (0=off, 255=100% green) |

Control-channel 36 - Blue LED 12

| Dec | imal | Hexad. | Perce | ntage | S/F | Feature |
|-----|------|--------|-------|-------|-----|-----------------------------|
| 0 | 255 | 00 FF | 0% | 100% | F | Blue (0=off, 255=100% blue) |

CLEANING AND MAINTENANCE

The operator has to make sure that safety-relating and machine-technical installations are inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 1) All screws used for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on housings, fixations and installation spots (ceiling, suspension, trussing).



3) The electric power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



DANGER TO LIFE!

Disconnect from mains before starting maintenance operation!

We recommend a frequent cleaning of the device. Please use a soft lint-free and moistened cloth. Never use alcohol or solvents!

There are no serviceable parts inside the device except for the fuse. Maintenance and service operations are only to be carried out by authorized dealers.

Replacing the fuse

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of same type and rating.

Before replacing the fuse, unplug mains lead.

Procedure:

- **Step 1:** Unscrew the fuseholder on the rearpanel with a fitting screwdriver from the housing (anti-clockwise).
- **Step 2:** Remove the old fuse from the fuseholder.
- Step 3: Install the new fuse in the fuseholder.
- **Step 4:** Replace the fuseholder in the housing and fix it.

Should you need any spare parts, please use genuine parts.

If the power supply cable of this device becomes damaged, it has to be replaced by a special power supply cable available at your dealer.

Should you have further questions, please contact your dealer.

TECHNICAL SPECIFICATIONS

| Power supply: | 230 V AC, 50 Hz ~ |
|--|----------------------|
| Power consumption: | 60 W/105 VA |
| DMX control channels: | 3/4/5/6/7/9/12/18/36 |
| DMX512 connection: | 3-pin XLR |
| Flash-rate: | 30 Hz |
| Number of LEDs: | 12 |
| LED type: | 3 W TCL |
| Dimensions (LxWxH): | 990 x 135 x 80 mm |
| Weight: | 3.75 kg |
| Maximum ambient temperature T _a : | 45° C |
| Maximum housing temperature T _c (steady state): | 65° C |
| Min.distance from flammable surfaces: | 0.5 m |
| Min.distance to lighted object: | 0.1m |
| Fuse: | F 2 A, 250 V |

Please note: Every information is subject to change without prior notice. 04.03.2013 ©